




Secure Your Bar

SAVE-A-LOAD[®]

Made in
USA

**INSTRUCTIONS FOR INSTALLING
Locking Sleeve For all
ACS10 Pickup Bars**

1. Remove Extension Tube from Main Tube as shown.

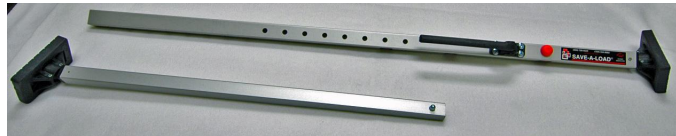

2. Remove handle Pin - turn bar on side with small side of pivot pin facing up and punch pin out small side to large side.



3. Pull handle straight out.



4. Remove Handle Bracket - unscrew four screws and lift bracket out.



5. Slide Locking Sleeve onto Main Tube from extension tube end and over the red Release Button. Ensure offset on sleeve matches offset of Release Button.




6. Install Handle Bracket, Handle and Pivot Pin in reverse order



7. To secure slide collar over Release Button and insert padlock.



(800) SAVLOAD
(800) 728-5623
www.saveaload.com

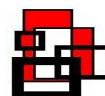

SAVE-A-LOAD, Inc.
327-A West Tremont Avenue
Charlotte, NC 28203